



DROP

USER MANUAL



TABLE OF CONTENTS

1. SAFETY PRECAUTIONS.....	3
2. MACHINE OVERVIEW.....	5
3. BEVERAGE EXAMPLES	6
4. RECOMMENDATIONS FOR SAFE USE.....	7
5. FIRST USE.....	8
6. PREPARING A BEVERAGE	9
6.1 ONE CAPSULE BEVERAGE PREPARATION.....	9
6.2 TWO CAPSULES BEVERAGE PREPARATION	11
7. CLEANING	12
8. DESCALING AT LEAST EVERY 3 – 4 MONTHS.....	13
9. TROUBLESHOOTING.....	15
9.1 NO LIQUID COMES OUT – NO WATER?.....	15
9.2 NO LIQUID COMES OUT – CAPSULE / INJECTOR BLOCKED?	16
9.3 VARIOUS	17

1. SAFETY PRECAUTIONS

1. Read all instructions and keep these safety instructions. Any type of misuse of the appliance may result in a potential injury.
2. Connect the appliance to a mains power socket with an earth connection only. Mains voltage must be the same as the details on the rating plate. The use of incorrect connection will negate the guarantee and may be hazardous.
3. This appliance is intended to be used in household only. It is not intended to be used in following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
4. Your appliance is intended for domestic use inside the home only at an altitude below 3400 m.
5. In case of any inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee may not apply.
6. We recommend using the NESCAFÉ® Dolce Gusto® capsules designed and tested for the NESCAFÉ® Dolce Gusto® machine. They were designed to interact together - the interaction provides the in-cup quality that NESCAFÉ® Dolce Gusto® is known for. Each capsule is designed to prepare a perfect cup, and cannot be reused.
7. Do not remove hot capsules by hand. Always use capsule holder handle to dispose of used capsules.
8. Always use the appliance on a flat, stable, heat resistant surface away from sources of heat or water splashes.
9. To protect against fire, electric shock and injury to persons do not immerse the power cord, plugs or the appliance in water or other liquid. Avoid spillage on the plug. Never touch the power cord with wet hands. Do not overfill the water tank.
10. In case of an emergency remove the plug from the mains power socket immediately.
11. Close supervision is necessary when the appliance is used near children. Keep the appliance / power cord / capsule holder out of reach of children. Children should be supervised to ensure that they do not play with the appliance. Never leave the appliance without surveillance while making a beverage.
12. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Persons who have a limited or no understanding of the operation and use of this appliance must first read and fully understand the contents of the user manual, and where appropriate seek additional guidance on its operation and use from the person responsible for their safety.
13. Do not use the appliance without the drip tray and drip grid, except when a very tall mug is used. Do not use the appliance for hot water preparation.
14. For health reasons, always fill the water tank with fresh drinking water.
15. After use of the appliance always remove the capsule and clean the capsule holder. Empty and clean the drip tray and capsule bin daily. Food allergy sufferers must rinse the appliance according to cleaning procedure.
16. The heating element surface is subject to residual heat after use and plastic housings may feel warm to touch several minutes upon use.
17. Unplug from the mains power socket when not in use.
18. Unplug from the mains power socket before cleaning. Allow to cool before putting on or taking off parts, before cleaning the appliance. Never clean wet or immerse appliance in any fluid. Never clean the appliance with running water. Never use detergents to clean the appliance. Clean the appliance only using soft sponges/brushes. The water tank should be cleaned with a clean food-safe brush.
19. Never turn the machine upside down.
20. If away for prolonged periods, on holiday, etc. the appliance must be emptied, cleaned and unplugged. Rinse before reuse. Operate the rinse cycle before re-using your appliance.
21. Do not turn off the appliance during the descaling process. Rinse the water tank and clean the appliance to avoid any residual descaling agent.
22. Any operation, cleaning and care other than normal use must be undertaken by after-sales service centres designated by NESCAFÉ® Dolce Gusto® hotline. Do not dismantle appliance and do not put anything into openings.
23. In case of intensive use without allowing sufficient cooling time, the appliance will stop functioning temporarily with the red indicator

1. SAFETY PRECAUTIONS

- light blinking. This is to protect your appliance from overheating. Switch the appliance off for 20 minutes to let it cool down.
24. Do not operate any appliance with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not operate any appliance that malfunctions or has been damaged in any manner. Unplug cord immediately. Return the damaged appliance to the nearest authorised service facility designated by NESCAFÉ® Dolce Gusto® hotline.
 25. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
 26. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces or sharp edges. Do not allow the cord to dangle (risk of tripping up). Never touch the cord with wet hands.
 27. Do not place on or near a hot gas or electric burner, or in a heated oven.
 28. To disconnect, turn the machine off, then remove the plug from the mains power socket. Do not unplug by pulling the cord.
 29. Always insert the capsule holder in the machine to prepare a beverage. Do not pull out the capsule holder before the indicator stops blinking. The appliance will not work if the capsule holder is not inserted.
 30. Machines equipped with a locking handle: Scalding may occur if the locking handle is opened during the brewing cycles. Do not pull up the locking handle before the lights on the machine stop flashing.
 31. Do not put fingers under the outlet during beverage preparation.
 32. Do not touch the injector of the machine head.
 33. Never carry the appliance by the machine head.
 34. The capsule holder is equipped with a permanent magnet. Avoid placing the capsule holder near appliances and objects that can be damaged by magnetism, e.g. credit cards, USB drives and other data devices, video tapes, television and computer monitors with picture tubes, mechanical clocks, hearing aids and loud speakers.
 35. Patients with pacemakers or defibrillators: Do not hold the capsule holder directly over the pacemaker or defibrillator.
 36. If the mains power socket does not match the plug on the appliance, have the plug replaced with a suitable type by after-sales service centres designated by NESCAFÉ® Dolce Gusto® hotline.
 37. Packaging is made of recyclable materials. Contact your local council / authority for further information on recycling programs. Your appliance contains valuable materials which can be recovered or recycled.
 38. For additional guidance on how to use the appliance, refer to the user manual on www.dolce-gusto.com or call NESCAFÉ® Dolce Gusto® hotline number.
 39. Please be aware that the appliance is still using electricity whilst in eco-mode (0.4 W/hour).
 40. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
 41. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
 42. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised by an adult.



To reduce the risk of fire or electric shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only!

EUROPEAN MARKETS ONLY: Think of the environment!



Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point or at an approved service centre, where it will be disposed of properly.

European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), stipulates that used household appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately to optimise the sorting and recycling of their parts and to reduce the impact on human health and the environment.

The guarantee does not cover appliances that do not work or do not work properly because they have not been maintained and/or descaled.

2. MACHINE OVERVIEW






- 1 Cold water icon
- 2 XL volume function
- 3 Hot water icon
- 4 Touch volume selector / Bar display
- 5 Rinsing tool
- 6 Water tank
- 7 Capsule holder
- 8 Capsule bin
- 9 Injector
- 10 ON/OFF icon /
Descaling signal /
Error signal
- 11 Injector tool
- 12 Cleaning needle
- 13 Drip tray
- 14 Drip grid

ECONOMY MODE

After 5 minutes of non-usage




TECHNICAL DATA

-  PH / SG / ZA:
220-240 V, 50-60 Hz, max. 1500 W
TT:
110-120 V, 60 Hz, max. 1500 W
-  max. 15 bar
-  0.8 L
-  ~3 kg
-  5-45 °C
41-113 °F
-  A = 25.2 cm
B = 31.9 cm
C = 25.2 cm




3. BEVERAGE EXAMPLES

Adjust drip tray

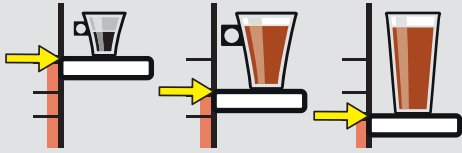



Select volume

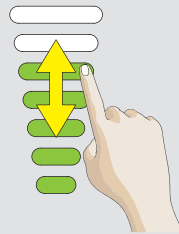

Choose hot or cold



ESPRESSO

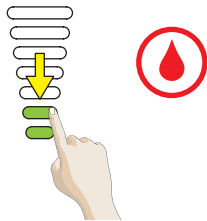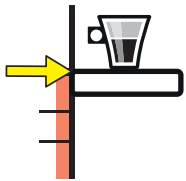

35 ml
Ristretto





50 ml
Espresso
Espresso Intenso

CAPPUCCINO



① + ②

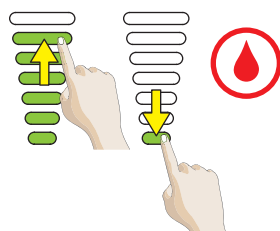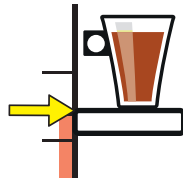

200 ml



40 ml





240 ml

CHOCOCINO



① + ②

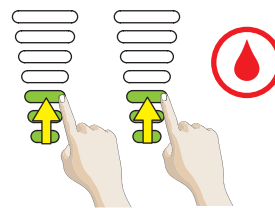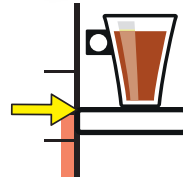

100 ml



110 ml





210 ml

CAPPUCCINO ICE



① + ②

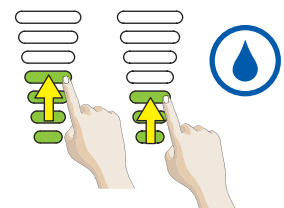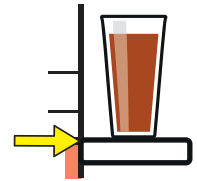

30g



125 ml




85 ml




240 ml


4. RECOMMENDATIONS FOR SAFE USE

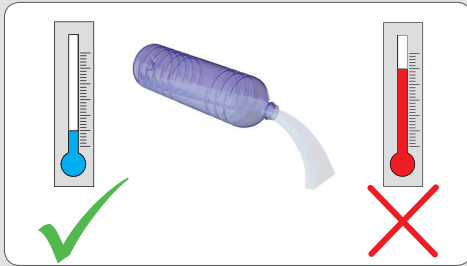

- ⚠ Never add hot water to the water tank!
- ⚠ For rinsing and beverage preparation only use fresh drinking water.

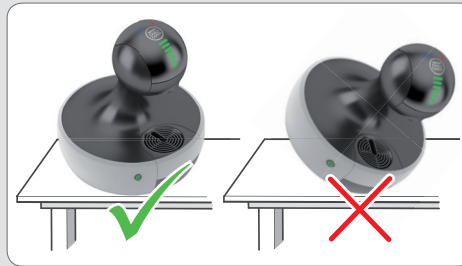


- ⚠ Always keep the machine upright!

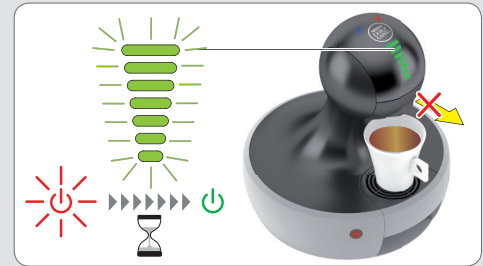

- ⚠ After finishing preparation, bar display flashes and power button blinks red for about 5 seconds. **During that time do not try to pull out the capsule holder!**



- ⚠ Do not touch plug with wet hands.
- ⚠ Do not touch machine with wet hands!

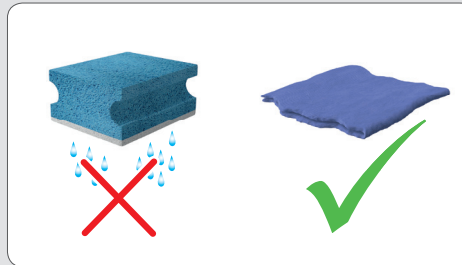

- ⚠ Never use a wet sponge. Only use a soft damp cloth to clean the top of the machine.



- ⚠ Do not touch used capsule after beverage preparation! Hot surface, risk of burns!



- ⚠ Never touch injector with surface of finger!
- ⚠ Do not use machine without injector!




- ⚠ Do not use the rinsing tool for tea or hot water preparation.



IF LEFT UNUSED FOR MORE THAN 2 DAYS: Fill water tank with fresh drinking water and insert it into machine. Rinse machine, therefore follow instructions in "7. CLEANING" on page 12, beginning with step 4. Remove water from water tank. Dry water tank. Insert water tank into machine.




5. FIRST USE

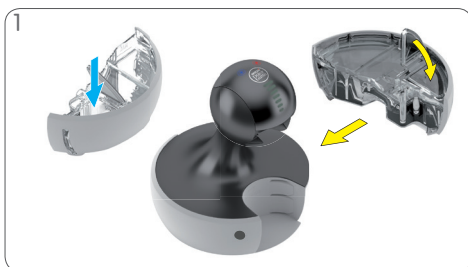


Rinse water tank manually with fresh drinking water. Fill water tank with fresh drinking water. Place cap and insert water tank into machine.




Make sure that rinsing tool is in capsule holder and capsule holder is in machine. Place an empty large container underneath the coffee outlet. Ensure to use the correct mains voltage as given in "OVERVIEW". Connect power plug to mains power socket.

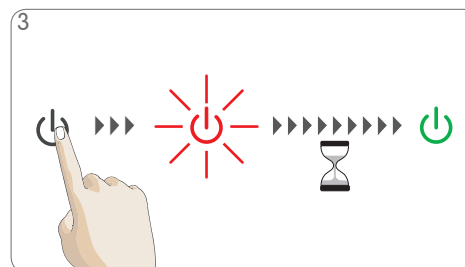


Switch on machine. Power button starts blinking red while machine is heating up for approximately 40 seconds. Afterwards power button lights steady green. Machine is ready to use.

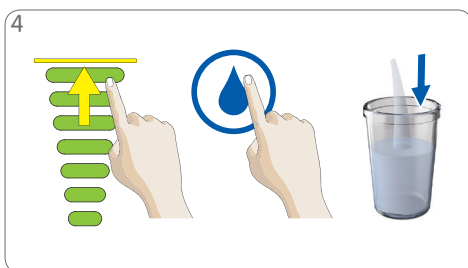


Start rinsing with cold water: Set bar display to maximum level with touch volume selector. Touch cold water icon. Machine starts rinsing. Lights on bar display vanish progressively.

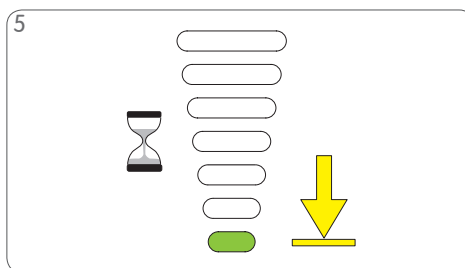

Wait until countdown is finished and machine stops.

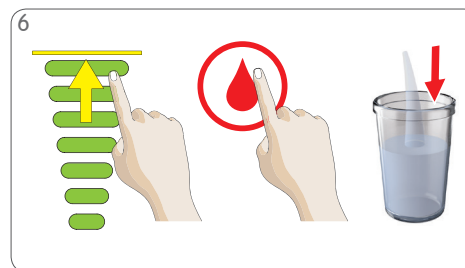


Continue rinsing with hot water: Set bar display to maximum level with touch volume selector. Touch hot water icon. Machine starts rinsing. Lights on bar display vanish progressively.

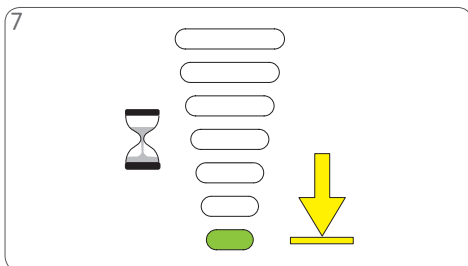

Wait until countdown is finished and machine stops.




Pull out capsule holder. Remove rinsing tool. Reinsert capsule holder. Remove container. **Warning: Hot water! Handle with care!** Empty container.

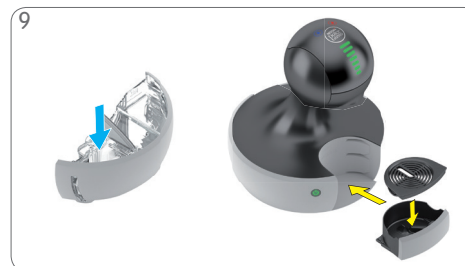


Fill water tank with fresh drinking water. Insert water tank into machine. Place drip grid on drip tray. Then insert drip tray at desired position.

6. PREPARING A BEVERAGE

6.1 ONE CAPSULE (E.G. LUNGO)

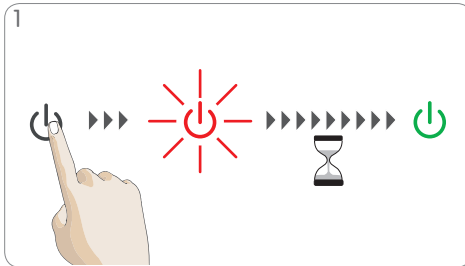

Check if the water tank contains enough fresh drinking water. Switch on machine. Power button starts blinking red while machine is heating up for approximately 40 seconds. Afterwards power button lights steady green. Machine is ready to use.

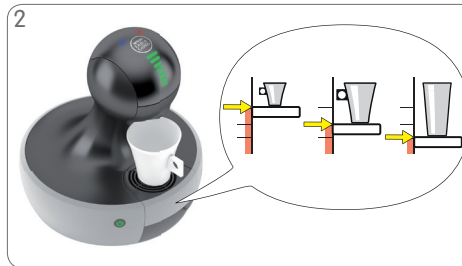


Adjust drip tray position. Place cup with correct cup size on drip tray. See "3. BEVERAGE EXAMPLES" on page 6 or package.




Pull out capsule holder. Make sure rinsing tool is not inside. Insert capsule in capsule holder. Insert capsule holder into machine.



Use touch volume selector to illuminate amount of bars in accordance with the number of bars shown on capsule, or select amount of bars to your own taste. Choose XL beverage for an extra big cup. Wait around 1.5 min if you need a second extra big cup.

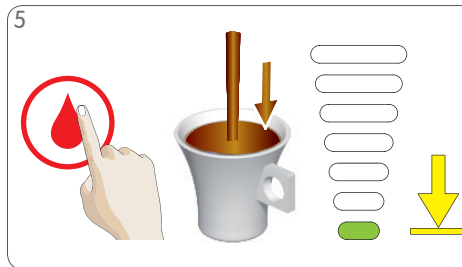

Touch hot water icon (or cold water icon—depending on beverage). Beverage preparation starts. Stay beside the machine throughout the preparation! Bar display lights vanish progressively. Machine stops preparation.

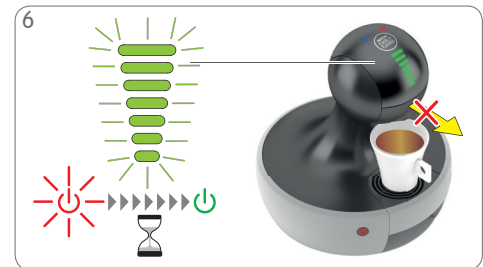

After finishing preparation, bar display flashes and power button blinks red for about 5 seconds. **During that time do not try to pull out the capsule holder!**



After extraction is finished remove cup from drip tray.



Pull out capsule holder. Remove used capsule. Put used capsule in capsule bin.




Rinse capsule holder with fresh drinking water from both sides. Dry capsule holder. Insert it back into machine. Enjoy your beverage!




6. PREPARING A BEVERAGE

6.2 TWO CAPSULES (E.G. CAPPUCCINO)

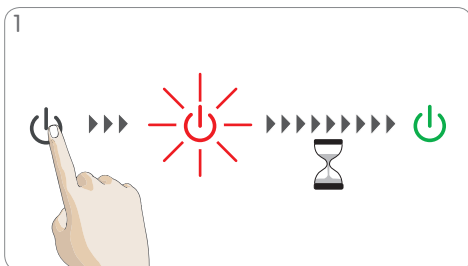

1 Check if the water tank contains enough fresh drinking water. Switch on machine. Power button starts blinking red while machine is heating up for approximately 40 seconds. Afterwards power button lights steady green. Machine is ready to use.

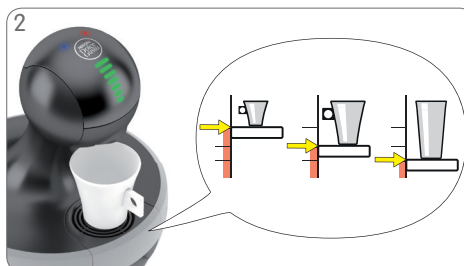

2 Adjust drip tray position. Place cup with correct cup size on drip tray. See "3. BEVERAGE EXAMPLES" on page 6 or package.




3 Pull out capsule holder. Make sure rinsing tool is not inside. Insert first capsule in capsule holder. Insert capsule holder into machine.



4 Use touch volume selector to illuminate amount of bars in accordance with the number of bars shown on capsule, or select amount of bars to your own taste. Choose XL beverage for an extra big cup. Wait around 1.5 min if you need a second extra big cup.



5 Touch hot water icon (or cold water icon—depending on beverage). Beverage preparation starts. Stay beside the machine throughout the preparation! Bar display lights vanish progressively. Machine stops preparation.

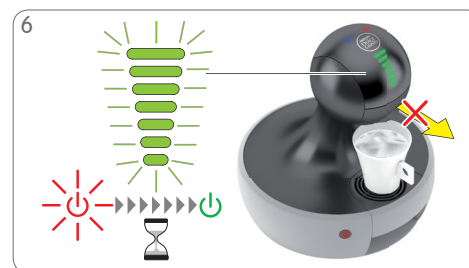

6 After finishing preparation, bar display flashes and power button blinks red for about 5 seconds.


During that time do not try to pull out the capsule holder!



7 Pull out capsule holder. Remove used capsule. Put used capsule in capsule bin.




8 Insert second capsule in capsule holder. Insert capsule holder into machine.

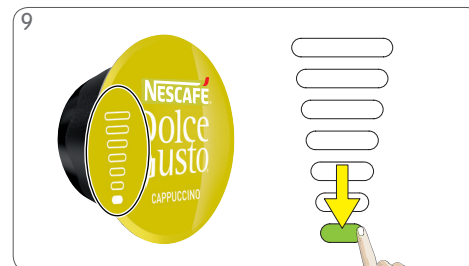


9 Use touch volume selector to illuminate amount of bars in accordance with the number of bars shown on capsule, or select amount of bars to your own taste.

6. PREPARING A BEVERAGE

6.2 TWO CAPSULES (E.G. CAPPUCCINO)

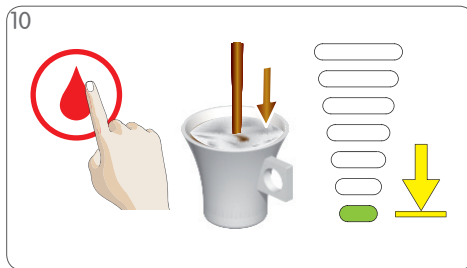

10 Touch hot water icon (or cold water icon—depending on beverage). Beverage preparation starts. Stay beside the machine throughout the preparation! Bar display lights vanish progressively. Machine stops preparation.

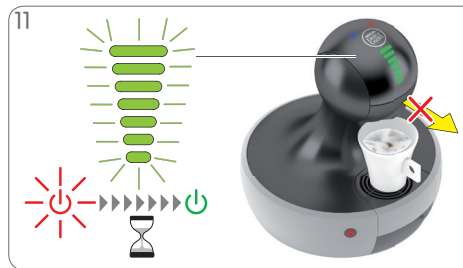

11 After finishing preparation, bar display flashes and power button blinks red for about 5 seconds. **During that time do not try to pull out the capsule holder!**



12 After extraction is finished remove cup from drip tray.




13 Pull out capsule holder. Remove used capsule. Put used capsule in capsule bin.




14 Rinse capsule holder with fresh drinking water from both sides. Dry capsule holder. Insert it back into machine. Enjoy your beverage!




7. CLEANING

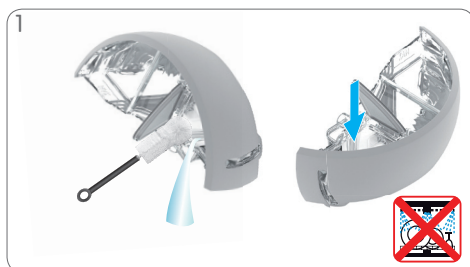

Rinse and clean water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards refill with fresh drinking water and insert it into machine. The water tank is not dishwasher proof!

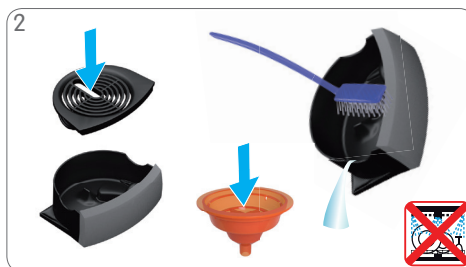


Rinse drip tray and rinsing tool with fresh drinking water. Clean drip tray with clean food-safe brush. The drip tray is not dishwasher proof!

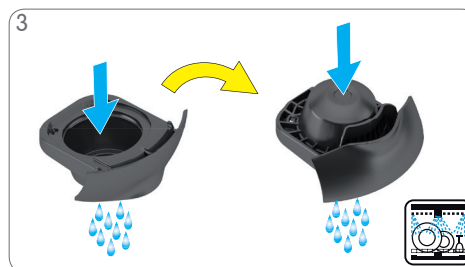


Clean with washing-up liquid and fresh drinking water both sides of capsule holder. Alternatively wash in dishwasher. Dry it afterwards.




Put rinsing tool into capsule holder. Insert capsule holder into machine. Remove drip grid and drip tray. Place an empty large container underneath the coffee outlet.

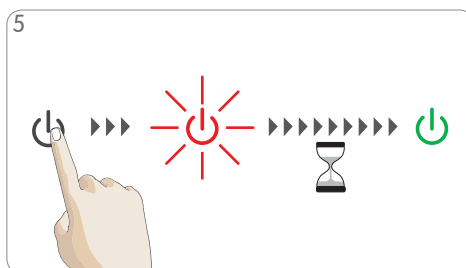

Switch on machine. Power button starts blinking red while machine is heating up for approximately 40 seconds. Afterwards power button lights steady green. Machine is ready to use.

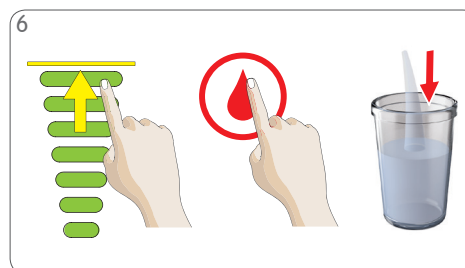


Rinse the machine: Light up all bars to max. level using touch volume selector. Touch hot water icon. Machine starts rinsing. Lights on bar display vanish progressively.

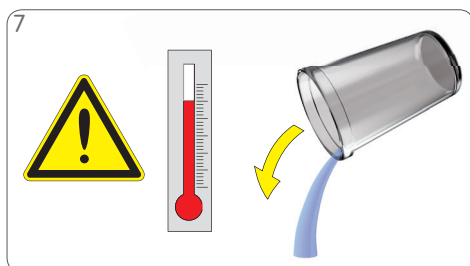

Remove container. **Warning: Hot water! Handle with care!** Empty container.



Pull out capsule holder. Remove rinsing tool. Reinsert capsule holder. Place drip grid on drip tray. Then insert drip tray at desired position. If any, remove water from water tank.

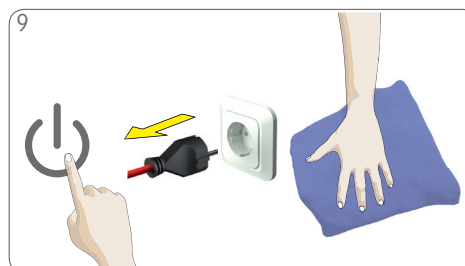

Switch off machine. Unplug power plug! Clean machine with a soft damp cloth. Dry it afterwards with a soft dry cloth.

8. DESCALING AT LEAST EVERY 3 – 4 MONTHS




www.dolce-gusto.com


! Use NESCAFÉ® Dolce Gusto® liquid descaler. To order, call the NESCAFÉ® Dolce Gusto® hotline or go on the NESCAFÉ® Dolce Gusto® website.



! Do not use vinegar for descaling!

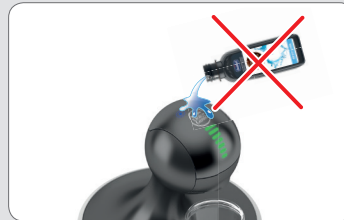


! Avoid contact of descaling liquid with any part of the machine.

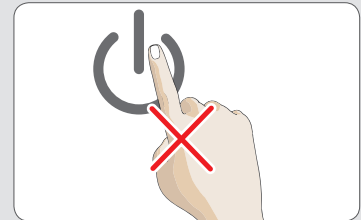

! Do not push power button during descaling cycle.



1
If the beverage comes out slower than usual (even in droplets), or if it is cooler than usual or if the power button is steady orange (descaling signal), the machine has to be descaled.

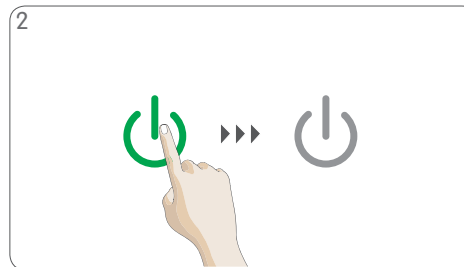


2
Switch off machine. If any, remove water from water tank.




3
Mix 0.5 litre fresh drinking water with descaler in a measuring cup. Pour descaling solution into water tank and insert water tank into machine.



4
Put rinsing tool into capsule holder. Insert capsule holder into machine. Remove drip grid and drip tray. Place an empty large container underneath the coffee outlet.

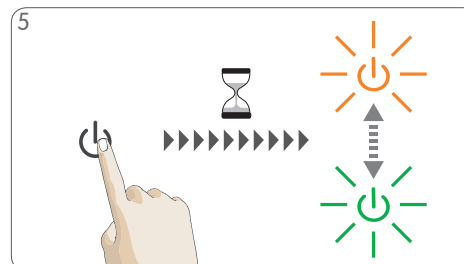


5
Press and hold power button for at least 5 seconds. Power button starts blinking alternately green / orange and machine enters descaling mode.

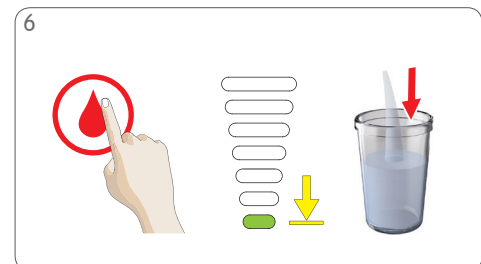


6
Touch hot water icon. Bar display lights vanish progressively. Machine descales in start-stop operation for approximately 2 minutes. Wait until extraction stops.



8. DESCALING AT LEAST EVERY 3 – 4 MONTHS

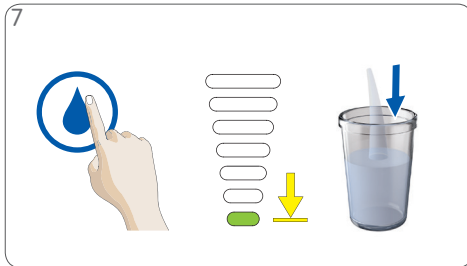


Touch cold water icon. Bar display lights vanish progressively. Machine descales in start-stop operation for approximately 2 minutes until the water tank is empty. Wait until extraction stops.

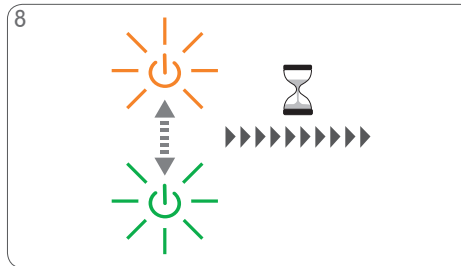


For a better effect of the descaler, the machine enters a waiting time of 2 minutes. The power button blinks alternately green / orange during the waiting time.




Empty and clean container. Rinse and clean water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards refill with fresh drinking water and insert it into machine.

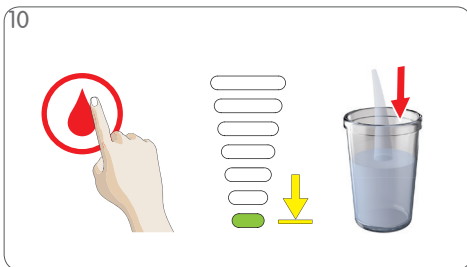


Touch hot water icon. Bar display lights vanish progressively. Wait until extraction stops.

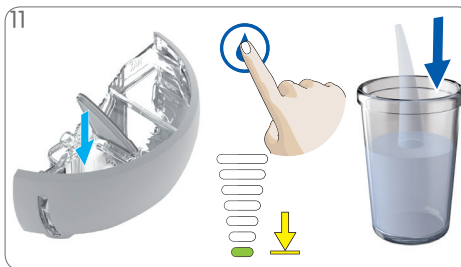

Fill water tank with fresh drinking water. Touch cold water icon. Bar display lights vanish progressively. Wait until extraction stops.

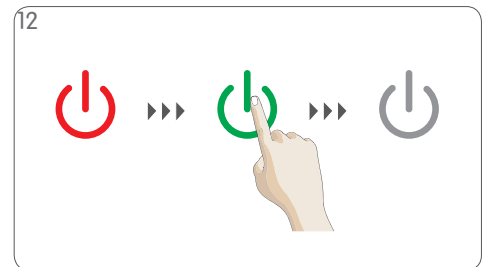

At the end of the rinsing cycle, power button lights up red. Wait until power button light turns green. Remove container. Switch off machine.

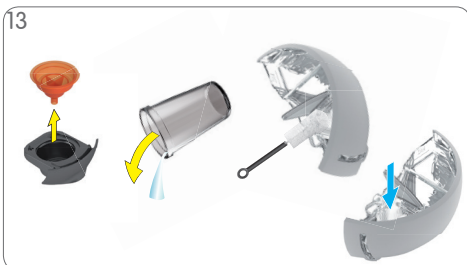


Pull out capsule holder. Remove rinsing tool. Reinsert capsule holder. Empty and clean container. Rinse and clean water tank. Afterwards refill with fresh drinking water and insert it into machine.




Clean machine with a soft damp cloth. Dry it afterwards with a soft dry cloth. Place drip grid on drip tray. Then insert drip tray at desired position.

9. TROUBLESHOOTING

9.1 NO LIQUID COMES OUT – NO WATER?

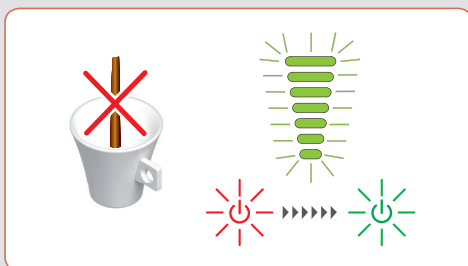

No liquid comes out: Beverage preparation stops part way during delivery or does not start at all. Bar display flashes and power button blinks red and green rapidly.

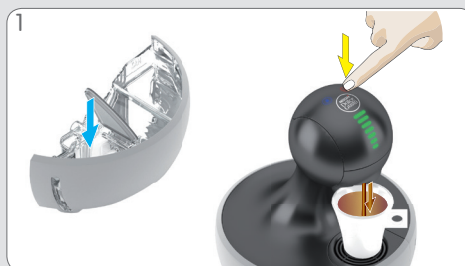


1 Check if the water tank contains enough fresh drinking water. If not, refill with fresh drinking water and touch hot/cold water icon again to continue preparation. If the water tank is full proceed as described in "9.2".

9.2 NO LIQUID COMES OUT – CAPSULE / INJECTOR BLOCKED?



No liquid comes out: The capsule may be blocked and under pressure.

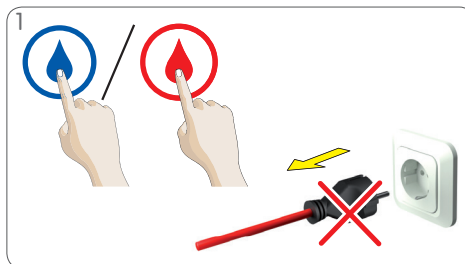

1 **Always keep machine upright!** To stop preparation, touch hot/cold water icon again. Do not unplug the machine! Machine releases pressure.




2 Coffee mix is pressed out of top of capsule holder. Wait until pressing process is finished. This is the case if you hear no noise coming from the machine.



3 Do not drink the coffee! If capsule holder can be pulled out: Put used capsule in capsule bin. If capsule holder cannot be pulled out, wait for 20 minutes, try again. If capsule holder is still blocked, unplug machine. Call the NESCAFÉ® Dolce Gusto® Hotline.



4 Rinse the machine: Follow instructions in "FIRST USE". Clean with washing-up liquid and fresh drinking water both sides of capsule holder. Rinse drip tray with fresh drinking water and clean it with a clean food-safe brush.

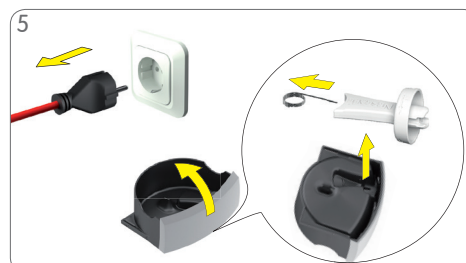

5 Unplug power plug! Turn drip tray over. Take out the injector tool. Pull cleaning needle out of injector tool. **Keep needle out of reach of children!**




9. TROUBLESHOOTING


9.2 NO LIQUID COMES OUT – CAPSULE / INJECTOR BLOCKED?




6 Remove capsule holder. Push injector tool over injector.

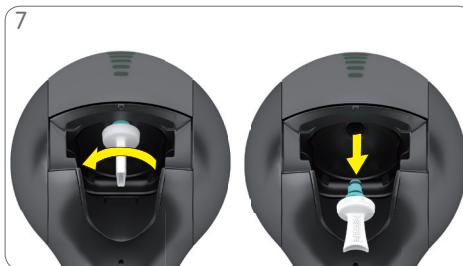


7 **Remove injector only on cold machine!** Turn injector tool anti-clockwise. Remove injector. **Do not leave injector unattended! Keep injector out of reach of children!**

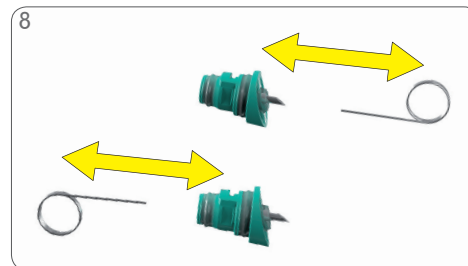

8 Insert cleaning needle into injector to unclog it. If not possible, prepare a descaling solution with one descaler and 0.5 litre drinking water. Put injector in descaling solution.

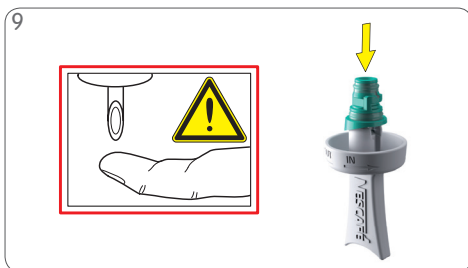


9 Put injector onto injector tool.

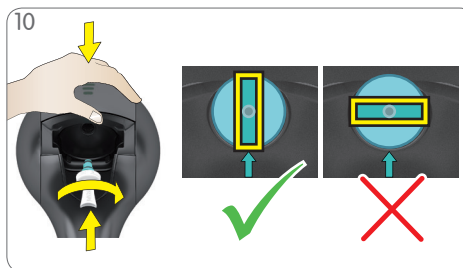


10 Insert injector from below into opening of machine. Support injector with hand. Rotate injector clockwise until it fits. Follow instructions in "8. DESCALING AT LEAST EVERY 3 – 4 MONTHS" on page 13.

9. TROUBLESHOOTING


9.3 VARIOUS

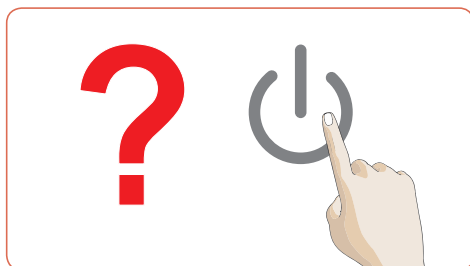

Machine cannot be switched on.

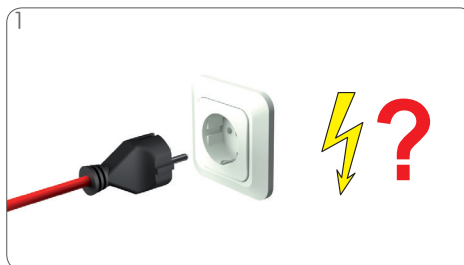

1 Check if the power plug is correctly plugged into a mains power socket. If yes, check your electricity supply.

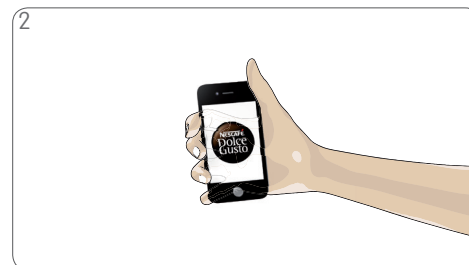

2 If machine still cannot be switched on, call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see last page.



Beverage is splashing out of coffee outlet.



1 To stop preparation, touch active hot or cold water icon. Pull out capsule holder. Check capsule. Put used capsule in capsule bin.



2 Insert a new capsule in capsule holder and insert it back into machine.



If the beverage comes out slower than usual (even in droplets), or if it is cooler than usual or if the power button is steady orange (descaling signal), the machine has to be descaled.




1 Use NESCAFÉ® Dolce Gusto® liquid descaler. To order, call the NESCAFÉ® Dolce Gusto® hotline or go on the NESCAFÉ® Dolce Gusto® website.




9. TROUBLESHOOTING


9.3 VARIOUS

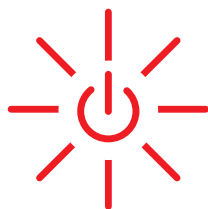

Power button flashes red fast.

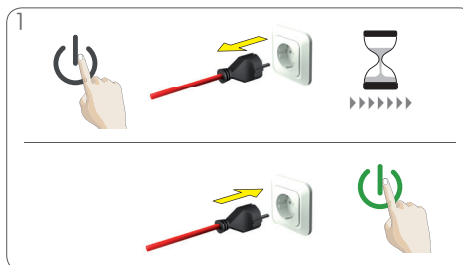


1 Switch machine off. Check if capsule is blocked, see "9.2 NO LIQUID COMES OUT – CAPSULE / INJECTOR BLOCKED?" on page 15. Unplug power plug and wait 20 minutes. Afterwards plug power plug into mains power socket and switch machine on.

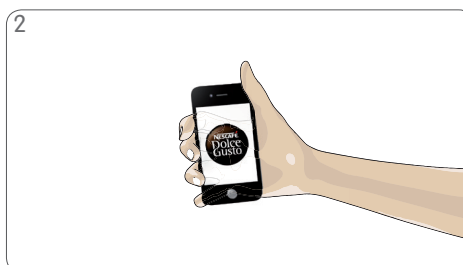


2 If power button still flashes red call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see last page.



Water accumulates underneath or around machine. Clear water leaks around capsule holder during beverage preparation.

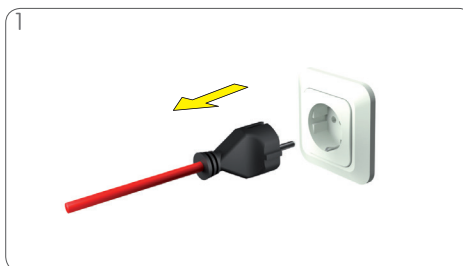

1 Unplug power plug!

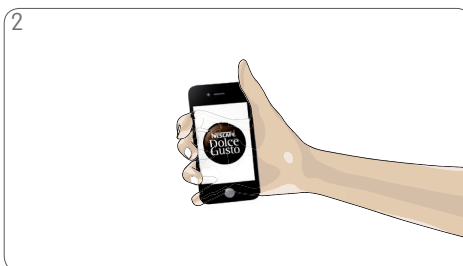

2 Call the NESCAFÉ® Dolce Gusto® Hotline or go on the NESCAFÉ® Dolce Gusto® website. For hotline numbers see last page.



Water is splashing out of coffee outlet during rinsing or descaling.



1 Put rinsing tool into capsule holder. Insert capsule holder into machine.





HOTLINES

AE 800348786	GB 0800 707 6066	Middle East: +971 4- 8100081	SI 080 45 05
AL 0842 640 10	GR 800 11 68068	MX 01800 365 2348	SK 0800 135 135
AR 0800 999 81 00	GT 1-800-299-0019	MK 0800 00 200	SR 0800 000 100
AT 0800 365 23 48	HK 2179 8888	MT 80074114	SV 800-6179
AU 1800 466 975	HN 800-2220-6666	MY 1800 88 3633	TH 1-800-295588
BA 0800 202 42	HR 0800 600 604	NI 1-800-4000	0-2657-8601
BE 0800 93217	HU 06 40 214 200	NL 0800-3652348	TR 0800 211 02 18
BG 0 800 1 6666	ID 001803657121	NO 800 80 730	4 44 31 60
BR 0800 7762233	IE 00800 6378 5385	NZ 0800 365 234	TT (868) 663-7853
CA 1 888 809 9267	IL 1-700-50-20-54	PA 800-0000	TW 0800-000-338
CH 0800 86 00 85	IT 800365234	PE 80010210	UA 0 800 50 30 10
CL 800 800 711	JO +962-65902998	PH 898-0061	US 1-800-745-3391
CO 01800-05-15566	JP 0120-879-816	PK 0800-62282	UY 0800-2122
CN 400 630 4868	KR 080-234-0070	PL 0800 174 902	VN 1800 6699
CR 0800-507-4000	KW +965 22286847	PT 800 200 153	ZA +27 11 514 6116
CZ 800 135 135	KZ 8-800-080-2880	PY 0800-112121	
DE 0800 365 23 48	LB +961-4548595	QA +974-44587688	
DK 35460100	LU 8002 3183	RO 0 800 8 637 853	
EE 6 177 441	LT 8 700 55 200	RU 8-800-700-79-79	
ES 900 10 21 21	LV 67508056	SA 8008971971	
FI 0800 0 6161	MA 080 100 52 54	SE 020-29 93 00	
FR 0 800 97 07 80	ME 020 269 902	SG 1 800 836 7009	