

MOOER

Baby Water

Acoustic Guitar Delay & Chorus Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (±10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems. Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

Main Features

- A chorus delay pedal specially designed for acoustic guitar, using high quality digital effect platform
- Delay and chorus effect can be obtained separately or together in series by switching the gears
- CHORUS: Classic standard chorus

- TRI-CHI: Triple chorus, more deep chorus effect
- ECHO: Warm delay effect
- CH-DL: Delay and chorus effect together in series
- DL-CH: Chorus added to delay effect

Panel Instruction

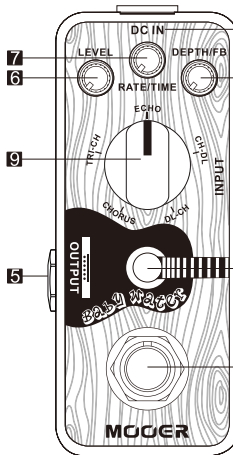

- 1. TRUE BYPASS Footswitch:**
Push down the footswitch to toggle between on and bypass status.
- 2. ON/OFF LED:**
Shows the on/off status of the Baby Water, when the LED is lit the effect is engaged.
- 3. DC IN Power Jack:**
For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).
- 4. INPUT Jack:**
1/4" mono audio jack, for connecting guitar.
- 5. OUTPUT Jack:**
1/4" mono audio jack, outputs the signal.
- 6. LEVEL Knob:**
Control the level of chorus in Chorus mode; Control the level of delay in Delay mode; Control the level of delay in the others modes.
- 7. RATE/TIME Knob:** Control the rate in Chorus mode; Control the time in Delay mode; Control the time in the others modes.
- 8. DEPTH/FB Knob:** Control the depth in Chorus mode; Control the depth in Chorus mode; Control the feedback in Delay mode; Control the feedback in the others modes.
- 9. MOD Knob:** To choose among the five modes.

Specification

Input: 1/4" monaural jack (impedance: 470k Ohms)

Output: 1/4" monaural jack (impedance: 100 Ohms)

Power Requirements: AC adapter 9V DC (center minus plug), recommended to use Moer Micro Power

Current Draw: 130 mA

Dimensions: 93.5mm (D) × 42mm (W) × 52mm (H)

Weight: 145g

Accessories: Owner's Manual

** Disclaimer: Any specification's update won't be amended in this manual.*

MOOER

Baby Water

木吉他延迟合唱效果器

用户手册

注意事项

使用前请仔细阅读

电源供应

请使用正确的交流电源插座连接电源变压器。
请使用内负外正的9V(±10%)电源变压器,最大工作电压不得超过12V,否则将会导致设备损坏,着火或者其他问题。
不使用时或雷雨天时请拔出电源。

连接

连接设备或断开连接前,请务必关闭电源及其它设备,这将有助于避免故障和损害其它设备。另外,要确保移动本机前断开所有的连接线和电源线。

放置场所

为防止变形、变色,及其它严重损坏,请避免以下情况:

- 阳光直射
- 热源
- 磁场
- 高温潮湿
- 多尘或不洁的地方
- 湿度较大
- 强烈震动或摇晃

电器干扰

在使用本机时,收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

清洁

请用干燥柔软的布清洁本机。如有必要,可用稍微湿润的布。切勿使用粗糙的清洁粉、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

操作


请勿用蛮力使用开关及控制元件。
请勿让纸屑、金属制品及其它物体落入机内。
注意不要掉落,不要使其受到冲击及过度压力。

性能概述

- 专为木吉他设计的合唱延迟效果器,采用高品质的数字效果平台
- 通过档位开关的调节可得到单纯的延迟或合唱效果,也可调节出延迟合唱串联在一起的效果
- CHORUS:经典的标准合唱
- TRI-CHI:三重合唱,合唱效果更加深邃
- ECHO:温暖的延迟效果

- CH-DL:合唱与延迟串联一起的音色
- DL-CH:在延迟的效果音上添加合唱音色

面板说明

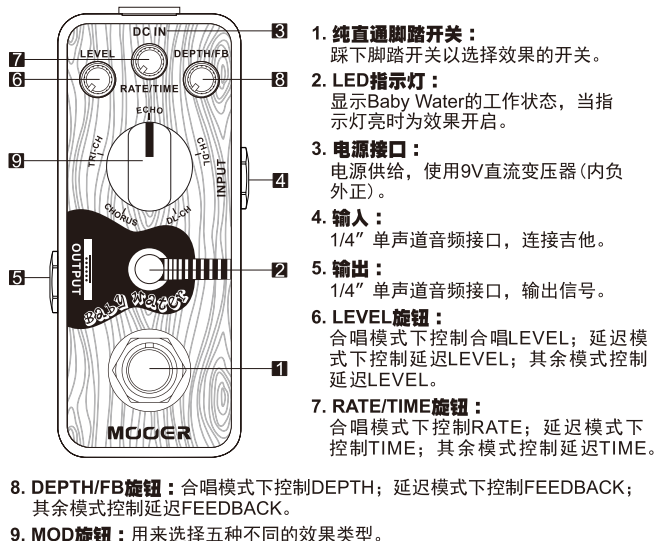

1. **纯直通脚踏开关:**
踩下脚踏开关以选择效果的开关。
2. **LED指示灯:**
显示Baby Water的工作状态,当指示灯亮时为效果开启。
3. **电源接口:**
电源供给,使用9V直流变压器(内负外正)。
4. **输入:**
1/4" 单声道音频接口,连接吉他。
5. **输出:**
1/4" 单声道音频接口,输出信号。
6. **LEVEL旋钮:**
合唱模式下控制合唱LEVEL;延迟模式下控制延迟LEVEL;其余模式控制延迟LEVEL。
7. **RATE/TIME旋钮:**
合唱模式下控制RATE;延迟模式下控制TIME;其余模式控制延迟TIME。

8. **DEPTH/FB旋钮:**合唱模式下控制DEPTH;延迟模式下控制FEEDBACK;其余模式控制延迟FEEDBACK。
9. **MOD旋钮:**用来选择五种不同的效果类型。

技术参数

输入: 1/4" 单声道音频接口(阻抗: 470k Ohms)
输出: 1/4" 单声道音频接口(阻抗: 100 Ohms)
电源供给: 9V 直流变压器(内负外正),推荐使用Mooger Micro Power
工作电流: 130mA
尺寸: 93.5mm (D) × 42mm (W) × 52mm (H)
重量: 145g
附件: 用户手册

*免责声明:参数更新恕不另行通知。