

WST-2058A \ WST-2058B \ WST-2058C

夹式校音器使用说明书

祝贺您拥有了WST-2058夹式校音器。在您使用本 产品之前,请花几分钟时间,阅读一下本说明书。

产品界面



操作流程

- 1. 长按 U/M 键开关机 , 本机上电默认为十二平均 律校音模式.
- 2. 短按 (b) /M 选择校音项目: C(十二平均律)、 G(吉他)、B(贝司)、V(小提琴)、UC (C调尤克里里)、UD(D调尤克里里)。
- 3. 按 A4 键调节A4: 430-450Hz(仅B、C款有此键操 作).
- 在吉他和贝司校音模式下,按り键调节降半音: b. b b (仅B、C款有此键操作)。
- 5. 音准显示:

WST-2058A 屏幕为正负显, 音准时音分指针指 向中间;音偏高指向右边;偏低指针指向左边。 WST-2058B 屏幕为背光, 音准时背光亮绿色; 音偏高或偏低背光亮橙色。

WST-2058C 屏幕为彩色背光, 音准时中间指针 亮绿色; 音偏高指针指向右边红色; 偏低指针指 向左边黄色。

6. 校音结果:

十二平均律: C C* D E'E F F* G G* A B'B

吉他: 6E 5A 4D 3G 2B 1E □司 · LB 4F 3A 2D 1G HC 小提琴: 4G 3D 2A 1E C调尤克里里: 4G 3C 2E 1A D调尤克里里: 4A 3D 2F 1B

电池更换

当显示屏变暗时清更换电池。 更换方法见右图:



▲ 注意: 1. 更换电池时,请注意电池的极性。 2. 若要长期放置产品, 请把电池取出。

技术规格

◆校音项目:十二平均律、吉他、贝司、小提琴、

C 调尤克里里、D 调尤克里里

●校音范围: A。(27.5Hz) - C。(4186.0Hz)

●A4范围: 430Hz-450Hz(仅B、C款)

●降半调:b bb(仅B、C款)

●校音精度:±1音分

●拾音方式:夹式

●校音模式: 白动 ●电源:3V(CR2032)锂电池

●体积:50(W)x27(D)x37(H)mm

●車量:23g

注意事项

●使用环境:

1.避免在高温、潮湿、零下等恶劣的环境中使用。 2.避免在强光下使用。

- 请勿自行拆卸本机。
- 请保存好本手册以便以后查阅。

随机附件

◆操作说明书 ◆3V(CR2032) 锂电池 ◆合格证

售后服务

亲爱的 小えび 用户:

在您使用 小 大 健 产品时,请仔细参阅产品说明书 当您有疑问和困难时,请拨打售后服务热线;

400-990-9866

- 一周内出现质量问题可退货退款
- 一月内出现质量问题可调换
- 一年内出现质量问题可免费维修
- 终身享有咨询和维修服务

[请向销售商索取有效购买凭证并予以保存]

换修政策

一 包换政策:

1.消费者自购机之日起1个月之内, 在正常使用情 况下, 出现非人为的产品性能故障, 且产品外观及包装 保持完好的可向所购机的经销商换机。

2.消费者在换机时应出示由经销商开出的购机收据 及保修卡,否则经销商可以不予更换。

二. 保修政策:

产品在购买之日起1年内,可免费享有维修服务; 对于超过1年的产品及人为或不可抗 力因素造成损坏的 产品,我司可提供有偿维修服务。

售后服务地址:

广东省珠海市高新区唐家湾镇科技九路10号 珠海市蔚科科技开发有限公司 售后服务部 邮编:519085

制造商:珠海市蔚科科技开发有限公司 制造商地址:广东省珠海市高新区唐家湾镇科技九路10号 电话:0756-3689866 邮箱: mail@cherubtechnology.com

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性 予以说明。

本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息 产品,表示环保使用期限的年数。所谓环 保使用期限是指在制造日起的规定期限

内,产品中所含的有害物质不致引起环境 污染,不会对人身、财产造成严重的不良 影响。环保使用期限仅在遵照产品使用说 明,正确使用产品的条件下才有效。不当 的使用,将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

	有害有毒物质或元素					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	(Cr(VI))	多溴联苯	多溴二苯醚 (PBDE)
外壳(壳体)	×	0	0	0	0	0
电子部件 (印刷电路板等)	×	0	×	0	0	0
附件 (电源线、交流 适配器等)	×	0	0	0	0	0

- ○:表示该有害有毒物质在该部件所有均质材料中的 含量均在 SJ/T11363-2006 标准规范的限量要求 以下。
- ×:表示该有害有毒物质至少在该部件的某一均质材 料中的含量超出 SJ/T11363-2006 标准规定的 限量要求。因根据现有的技术水平,还没有什 么物质能够代替它。



www.cherub.cn 中国制造



Owner's Manual WST-2058A \ WST-2058C CLIP-ON TUNER

Thank you and congratulations on your purchase of Cherub WST-2058. Please take the time to read through this manual to ensure you get the best from your WST-2058.

Product Interface



Operation

- Press U/M for 2 seconds to turn On/Off WST-2058. The default tuning mode is Chromatic when first turning on this tuner.
- 2.Press **U /M** shortly to set tuning mode: C (Chromatic), G (Guitar), B (Bass), V (Violin), U-C (Ukulele C), U-D (Ukulele D).
- 3.Press A4 shortly to set A4: 430~450Hz.(B&C MODEL ONLY)
- 4. In Guitar and Bass mode, Press b to set: b, bb (B&C MODEL ONLY)

5.Tuning:

WST-2058A screen shows positive and negative parameter, when it is sharp, the pointer points to right, when it is flat, the pointer points to left.

WST-2058B screen use the backlight module, when it is in tune, the backlight shows GREEN, when it is sharp or flat, the backlight shows ORGANGE.

WST-2058C screen use the colourful backlight module, when it is in tune, the pointer turns to the GREEN area, when it is sharp, the pointer turns to the RED area(Right), when it is flat, the pointer turns to the YELLOW area(Left).

6. Tuning result:

Chromatic: C C* D E E F F* G G* A B B

Guitar: 6E 5A 4D 3G 2B 1E

Bass: LB 4E 3A 2D 1G HC Violin: 4G 3D 2A 1E

Ukulele C: 4G 3C 2E 1A

Ukulele D: 4A 3D 2F* 1B

Installing Batteries

When the LCD or back light becomes \dim , please change the battery promptly as the following image instructs.



A NOTE

NOTE: Pay attention to polaritywhen replacing battery.Remove the battery if the product will not be used for a long period.

Specifications

- ●Tuning mode: Chromatic, Guitar, Bass, Violin, Ukulele C,
- Tuning range: A₁(27.5Hz)~C₂(4186.0Hz)
- A4: 430Hz~450Hz (B&C MODEL ONLY)
- ●Flat tuning: b. bb (B&C MODEL ONLY)
- Accuracy: ±1 cent
- ●Detection method: Clip
- ●Tuning mode: Auto
- ●Power supply: 3V (CR2032) Lithium battery
- Dimensions: 50(W)x27(D)x37(H)mm
- Weight: 23g

Precautions

- Environment:
- 1.Do NOT use the tuner in high temperature, or high humidity, or subzero environments.

 2.Do NOT use the tuner in the direct sunlight.
- Please do NOT disassemble the tuner by yourself.
- Please keep this manual for future reference.

Accessories

- Owner's manual
- ●3V(CR2032) Lithium battery

© 2015 Cherub Technology-All rights reserved.

No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.



MADE IN CHINA

THE FCC REGULATION WARNING (for U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE mark for European Harmonized Standards

CE Mark which is attached to our company's products of Battery mains the product is in fully conformity with the harmonized standard(s) EN 61000-6-3:2007-A1:2011 & EN 61000-6-1:2007 Under the Council Directive 2004/108/EC on Electromagnetic Compatibility.

www.cherubtechnology.com