Manuals+ — User Manuals Simplified.



cudy WU650 WLAN Adapter Installation Guide

Home » cudy » cudy WU650 WLAN Adapter Installation Guide 🖾



Contents

WU650 WLAN Adapter
 Driver Installation
 WiFi Adapter Mode
 Soft AP Mode
 EU Declaration of
 Conformity
 Documents / Resources
 References
 Related Posts

WU650 WLAN Adapter

Quick Installation Guide Email: <u>support@cudytech.com</u> Driver & Manual: <u>www.cudytech.com/download</u>

Driver Installation

1. Please insert the usb adapter directly into the computer's USB port.



2. Put the CD into the computer drive.



3. Open the driver folder and double click the installation file "Setup.exe". Click "Next"to finish the installation.

REALTEK USB Wireless LAN Software		
	REALTEK USB Wireless LAN Software The InstallShield Wizard will install REALTEK 11n USB Wirekess LAN Software on your computer. To continue,click Next.	
Back Next Cancel		

4. After finishing the installation, in the lower right corner of the taskbar, [REALTEK Client Management Software **IIII**] appears, indicating the installation succeed.



WiFi Adapter Mode

- 1. Double-click " 🎎 " REALTEK USB Wireless LAN Utility.
- 2. Click on the upper menu "Available Network", select the wireless network SSID you want to connect to.

REALTEK USB Wireless LAN Utility					
Refresh(R) Mode(M) About(A)					
MyComputer Realtek RTL	General Profile Available Network Status Statistics Available Network(S)				
	SSID	Channel	Encryption	Network Authentication	Signal
	XXXX	4	AES	WPA PSK	100%
	xxxx	12	AES	WPA PSK	50%
		Refres	sh	Add to Profile	

3. Enter the network key, confirm the network key, click "OK" as shown below:

Wireless Network Properties:	X
Profile Name: XXXX	
Wireless network security This network requires a key for the following:	
Network Authentication: WPA2-PSK	
Data encryption : AES	
Network key:	
Confirm network key:	
OK Cancel	

4. After the connection is successful, the signal strength and link quality are displayed, as shown below:

REALTEK USB Wireless LAN Utility				
Refresh(R) N	Refresh(R) Mode(M) About(A)			
MyComputer Realtek RTL	General Profile Available Network Status St Status: Associated Speed: Tx:150Mbps Rx:300Mbps Type: Infrastructure Encryption: AES SSID: XXXX Signal Strength: Link Quality: ReNewIP	98% 100%		

Soft AP Mode

1. Click on the management software **IIIII** menu [Mode] to select [Access Point], as shown below:

REALTEK US	B Wireless LAN Utility		
Refresh(R) Mode(M) About(A)			
MyComputer	Base station	Network Status Statistics	
Realtek RTL	Access Point		
	Virtual WiFi		
	Type: Encryption: Signal Strength: Link Quality:		
	ReNewIF		

2. After switching to access point mode, the SSID displays the name of the computer, asshown below:

REALTEK USB Wireless LAN Utility		
Refresh(R)	Mode(M) About(A)	
MyComputer Realtek RTL	General Advanced Statistics ICS SSID: BSSID: 00:0D:B1:A2:0B:D1 Association Table AID MAC Address Period of use Configuration	

 Click on the image above "Configuration" to open the Wireless Network Properties Settings dialog to set the network name (SSID), channel, encryption algorithm and password. Click "OK".

Wireless Network Properties:	X
Network name (SSID): XXXX_AP Channel: 6 (2437MHz)	
Wireless network security This network requires a key for the following:	
Network Authentication: WPA2-PSK	
Data encryption : AES Network key: ********** Confirm network key: *******	
OK Cancel	

4. Click "ICS" to select the network connected to your computer, click "Application", as shown below:

REALTEK USB Wireless LAN Utility				
Refresh(R)	Refresh(R) Mode(M) About(A)			
MyComputer Realtek RTL	General Advanced Statistics ICS Set up Internet connection sharing (ICS) ConnName Device name WiFi connection 4 11b/g Wireless LAN Mini PCI Express Adapter III			
		Application		

EU Declaration of Conformity

Cudy hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC and 2011/65/EU. The original EU declaration of conformity may be found at <u>http://www.cudytech.com/ce</u>.



Documents / Resources

 Cudy WU650 WLAN Adapter
 [pdf] Installation Guide

 WU650, WLAN Adapter, WU650 WLAN Adapter, Adapter

References

- © <u>Cudy CE</u>
- O Download Center

<u>Manuals+</u>,