

### On/Off

**EK**

**SKP**

**SKM-S**

**SK**

Off -> On

**EK/SKP/SK/SKM-S**

short on

On -> Off

**EK/SKP/SK/SKM-S**

long off

### EK Setup

3.5 mm

3.5 mm

3.5 mm

XLR

OR

### EW-D Smart Assist

Download on the App Store

GET IT ON Google Play

### Sennheiser Documentation App

Download on the App Store

GET IT ON Google Play

or online at [www.sennheiser.com/download](http://www.sennheiser.com/download)

EW-DP\_

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany  
www.sennheiser.com

Printed in Germany  
Publ. 08/23, 592859/A04

## Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Quick Guide

Kurzanleitung

Guide rapide

Guía rápida

Guía de inicio rápido

Guia rápido

Beknopte handleiding

Krótká instrukcja obsługi

Snabbguide

Kort vejledning

Pikaohje

Γρήγορος οδηγός

Kisa Kilavuz

Краткая инструкция

簡要説明

快速使用指南

クイックガイド

요약 안내서

**SENNHEISER**

### Mute

**SK**

**SKP**

**SKM-S**

### EK Power Supply / Charging

USB-C Power

Powerbank

### EW-DP EK

LINK LED

DATA LED

UP

DOWN

SET

SYNC

ESC ON/OFF

Headphone Output

USB-C Power/Charging

MIC OUT

USB POWER

Microphone Output

### Battery

**EK**

optional: 2 AA batteries

BA 70 rechargeable battery (included)

insert batteries simultaneously

### SKP

2 AA batteries (included)

optional: BA 70 rechargeable battery

### EW-DP SKP

SYNC

48V

ON/OFF

REC

MUTE

Micro-SD Slot

Micro-SD

MIC

Microphone Input

microSD

Battery slot

3-poles XLR plug

FIX/UNFIX

### Battery

**SK**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### SKM-S

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### EW-D SKM-S

ON/OFF

DATA LED

SYNC

LINK LED

MUTE

### EW-D SK

DATA LED

LINK LED

SYNC

MUTE

ON/OFF

### EK Display

Default screen

Instruction Manual

### LEDs

LINK LED/ PWR LED (SKP)	Meaning
Green dot	- Link ok - audio active
Yellow dot	- Link ok - audio muted or no capsule on SKM
Yellow sun icon	- Link ok - audio clip
Red dot	- No link
Red sun icon	- Link ok - Low transmitter battery
White circle	- Device switched off

DATA LED

Blue sun icon	Bluetooth active to - sync with transmitter - connect with app
Blue dot	Firmware update in progress

### Identify/Battery check

On -> Identify/Check

**SK/SKP/SKM-S**

short Identify/Check

LINK LED SK/SKP/SKM-S	Level
Green	≤ 100 %
Yellow	≤ 60 %
Red	≤ 20 %

Display of synced EK

### EK Menu

Gain: Output level +21 dB

Output level: Headphone -15 dB

Headphone: Mute switch

Mute switch: Auto scan ignored

Auto scan: Channel 526.000 MHz (94)

Channel: Frequency 94 526.000 MHz

Frequency: Brightness 471 470.200 MHz

Brightness: Reset 80 60 %

Reset: Reset to factory defaults? Yes/No

EW-D Smart Assist

Available on the App Store | Available on Google play

Sennheiser Documentation App

Available on the App Store | Available on Google play

### SKP Attach & Record

Attach microphone

XLR-Mic

Record

- insert Micro SD-Card
- long-long press (11 sec.) ▶ format Micro SD-Card
- short press ▶ start Rec.
- long press (3 sec.) ▶ stop Rec.

Rec LED Pattern → Online Manual

### EK Stacking/ Mounting plate

Mounting instructions

### Sync

SKP OR SK OR SKM-S

short press

### Mic Handling

SKM-S

### ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")