

19" 1RU Power Supply Frame For Optical Modules

User's Manual (BR-400)



Contents

Welcome!	- 3 -
Product Description	- 3 -
Shipping group	- 3 -
Installation	- 4 -

Welcome!

Congratulations on your purchase of the **19" 1RU Power Supply Frame for Optical Module, BR-400**. This manual contains information that will assist you in installing and operating the product.

Product Description

OPTICIS **BR-400**, 19" 1RU multi-mounting rack and is modular and systematic fiber-optic solution providing a flexibility to adopt Opticis Optical extension modules, up to 8 units.

Each module can be powered from BR-400. BR-400 uses 100-240VAC, 50-60Hz of dual input power with load-sharing and redundant backup.

BR-400 adopts two(2) LEDs in the front panel for power supply failure to run the stable system without any disruption or disconnection from the power failure.

*** Note: The optical modules are separately sold.**



Shipping group

- **BR-400:** One (1) unit
- **Module bracket:** Eight (8) units
- **Heat Sink:** Sixteen (16) units
- **Screw:** Sixteen (16) units
- **Power cable for optical module:** Eight (8) units
- **User manual:** One (1) unit
- **Options**
 - 1) **BR-400-PS (IT):** Power supply for BR-400 (100-240VAC, 50-60Hz)
 - 2) **BR-400-PS (MD):** Medical certified power supply for BR-400 (100-240VAC, 50-60Hz)

Installation

Step 1

Remove the 'CLASS 1 LASER PRODUCT' label which covers screw hole in **part A** and remove the screw, either.

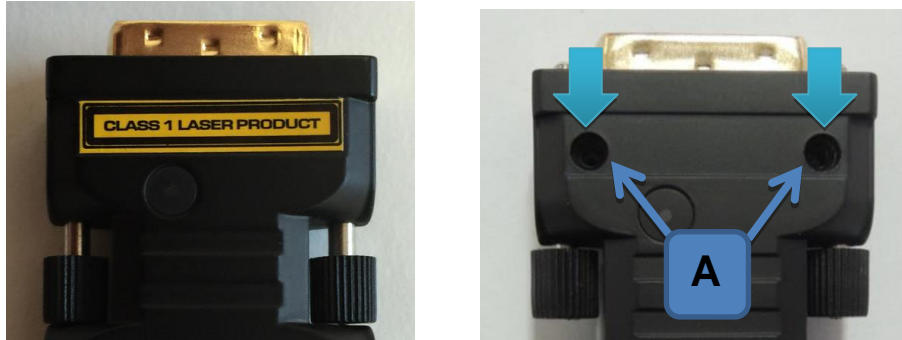


Fig. 1: Remove 'CLASS 1 LASER PRODUCT' label and screws

Step 2

Install optical module on the Module bracket with by provided screws according to **Fig.2** for each module.

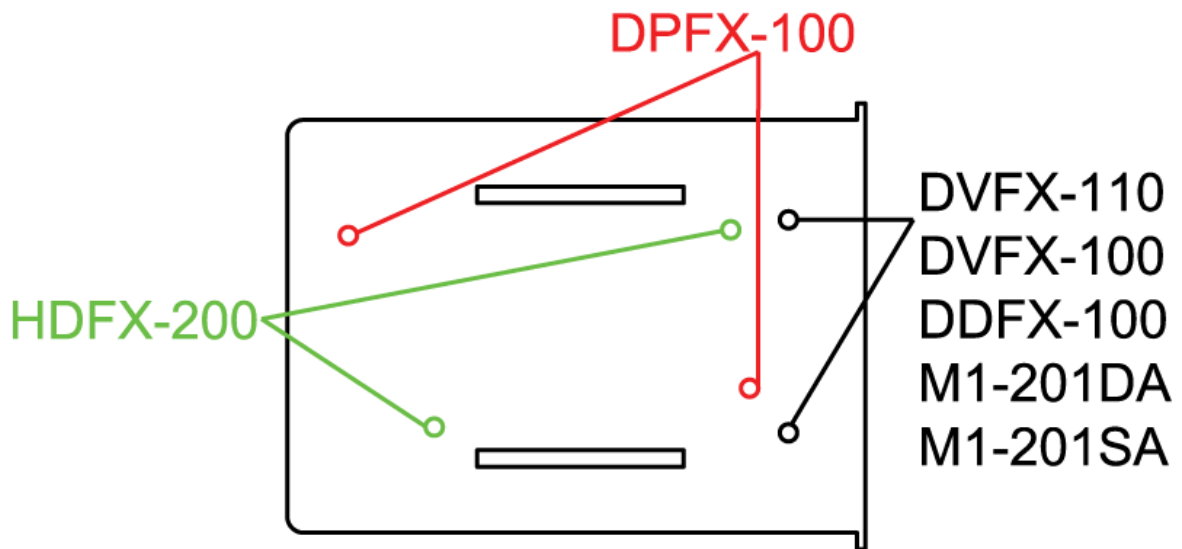


Fig. 2: Holes on Module bracket for each Opticis optical module

Step 3

Stick the two(2) Heat sinks on the bottom of Module bracket.

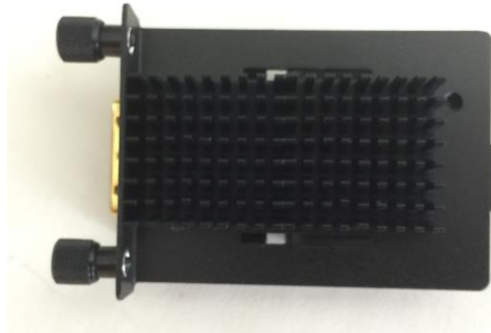


Fig. 3: Two(2) Heat sinks for each Module bracket

Step 4

Mount the Module bracket on BR-400 and connect Power cable and optical cable to each Opticis optical module.

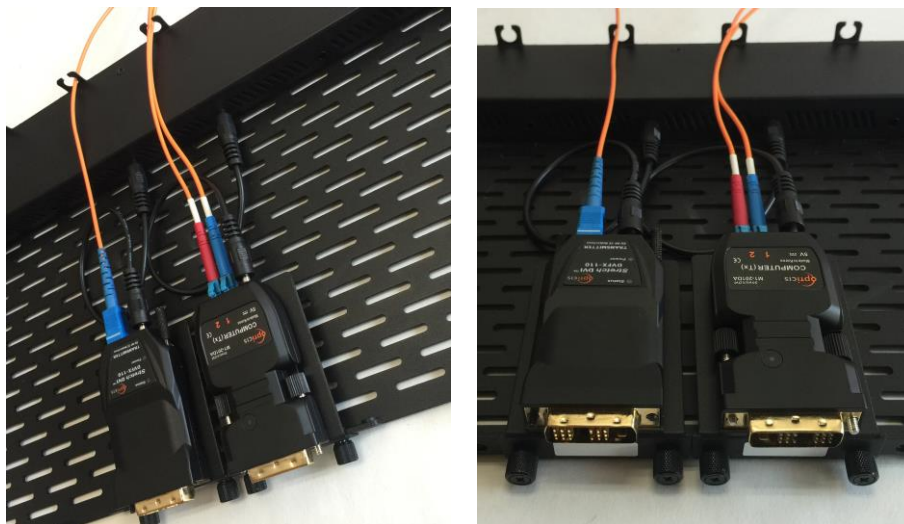


Fig. 4: Mounting the Module bracket on BR-400.

Step 4

Connect one(1) or two(2) BR-400-PS (IT) or BR-400-PS (MD) to BR-400.